

SWIFTSPACE

Monitor Arm Adjusting (Tighten or Loosen)

Step 1: Remove under wire manager by pulling away from monitor arm.



Step 2: Remove side panel by pulling away from monitor arm.



Step 3: Take An Allen Key and adjust the lower bolt. It will be the bolt furthest away from the monitor attachment. (See image)



Step 4: Replace all covers. First the side panel, followed by the bottom panel.

