

## Setting up a Foresight station

1. Open the legs and remove the thumbscrews from the latch on the legs. Keep these close by, as you will need them to complete assembly of the station.



2. Lift the work surface. Align the support bracket on the legs with the latch on the work surface, and lower the work surface so the work surface latch rests in the support bracket. Check to make sure the work surface latches on both sides of the station are supported by the legs.



3. Screw the thumbscrew through the slot on the work surface latch and into the leg. Tighten the thumbscrew.




4. For a double station, repeat to set up the opposite side.



5. Lock all 4 casters and lower the caster covers.



6. With the casters locked, lift and push the end of the station up against the wall or next station in the run. For stations in a run, lock the station legs together using the Foresight Linking Bracket. Slide the bracket over both sets of legs, then use the thumbscrew to lock the bracket to the leg.

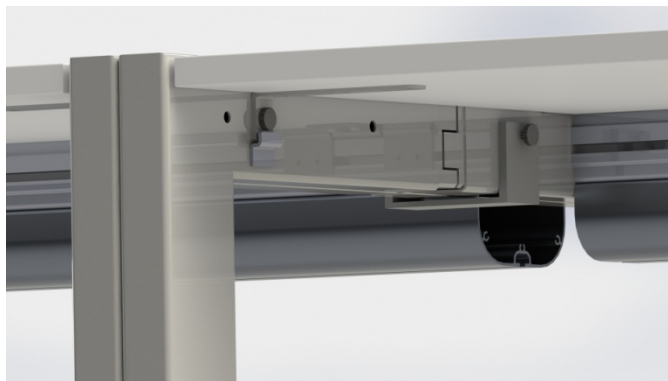

7. Pull the legs at the end of the run out slightly, away from the table.